SAMSUNG

MIKROHULLÁMÚ SÜTŐ
G2618C

Használati utasítása

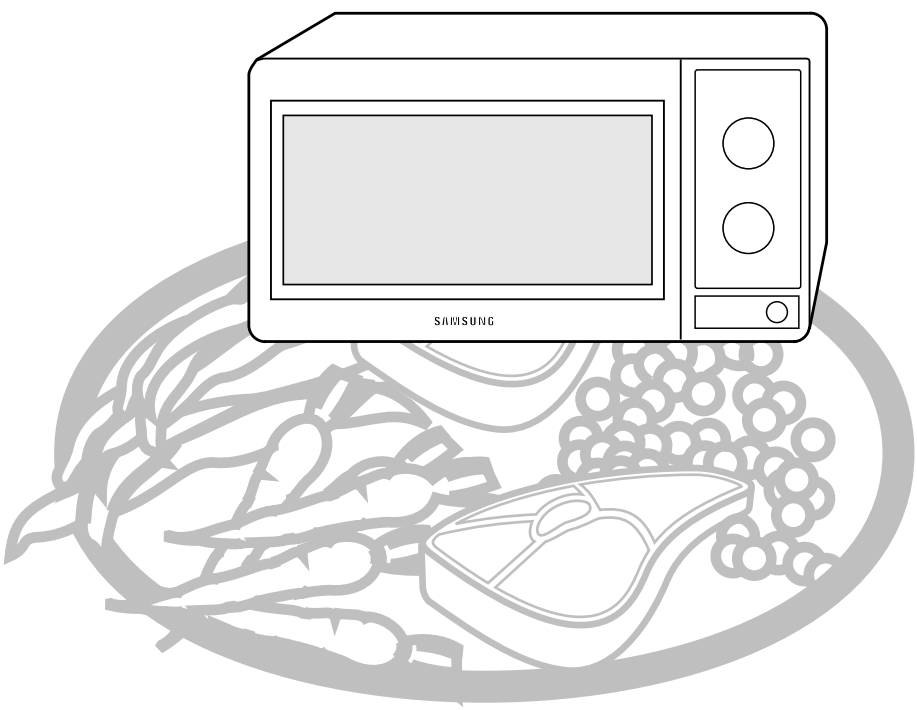

Code No.: DE68-01129C

E Használati utasítás fontos információkat tartalmaz a mikrohullámú sütőről.

Kérjük, szakítson időt az elolvasására, hogy kihasználhassa a mikrohullámú sütő összes előnyét!

H

Tartalomjegyzék

◆ TANÁCSOK ÉS ADATOK
- A mikrohullámú sütő részei 2
- Vezérlőpanel 3

◆ HOGYAN KELL EZT A FÜZETET HASZNÁLNI? 4

◆ A MIKROHULLÁMÚ SÜTŐ ELHELYEZÉSE ÉS ELŐKÉSZÍTÉSE
- Biztonsági figyelmeztetések 5
- Tartozékok 7
- A mikrohullámú sütő elhelyezése 8
- Hogyan működik a mikrohullámú sütő? 9
- A sütő működésének ellenőrzése 9
- Teendő probléma esetén 10

◆ FŐZÉS A MIKROHULLÁMÚ SÜTŐVEL
- Főzés/felmelegítés 11
- A főzés megszakítása 12
- A főzési idő meghosszabbítása 12
- Ételek felolvasztása 13
- Ételek azonnali melegítése 13
- Főzési teljesítmények táblázata 14

◆ HAGYOMÁNYOS FŐZÉSI MÓDSZEREK
- Grillezés 15

◆ TANÁCSOK ÉS ADATOK
- Használható edények 16
- Sütési útmutató 17
- A mikrohullámú sütő tisztítása 23
- A mikrohullámú sütő tárolása és javítása 23
- Műszaki specifikáció 24

A mikrohullámú sütő részei

H

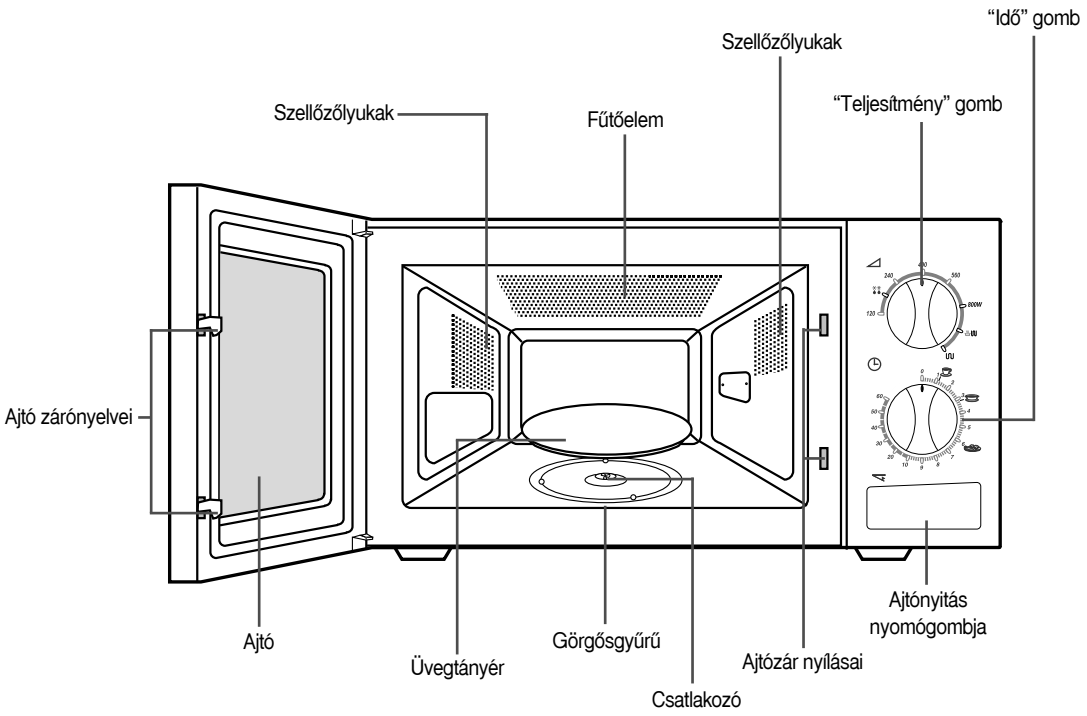

Vezérlőpanel

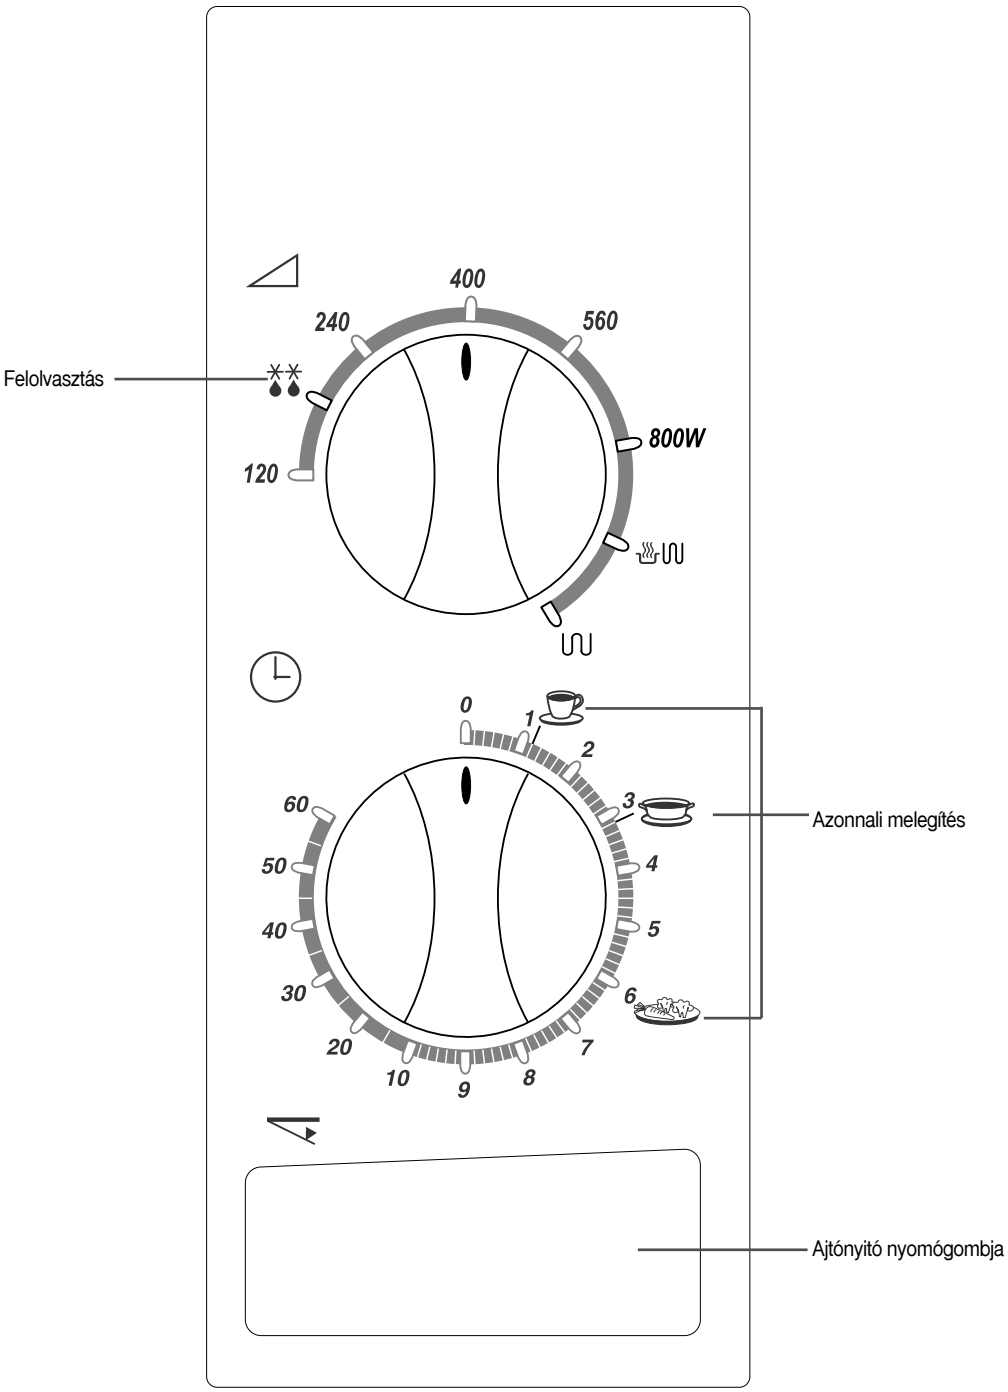

Hogyan kell ezt a füzetet használni?

H

A mikrohullámú sütő Használati utasítása sok hasznos információt tartalmaz a mikrohullámú sütőről:

- *biztonsági óvintézkedéseket*
- *a megfelelő tartozékokat és edényzetet*
- *hasznos főzési tanácsokat.*

A tartalomjegyzék előtti oldalon egy ***Gyors emlékeztető útmutató található****, mely három alapműveletet ismertet:*

- *egy étel megfőzését*
- *egy étel felolvasztását*
- *egy étel grillezését.*

E Használati utasítás végén látható a sütő és a sütő vezérlőpaneljének ábrája, ezek segítségével Ön könnyebben megtalálhatja az egyes tartozékokat és kezelőgombokat!

A sütő beállítását lépésről-lépésre ismertető magyarázatoknál az alábbi szimbólumok szerepelnek:

FIGYELMEZTETÉS

MEGJEGYZÉS

A MIKROHULLÁMMAL KAPCSOLATOS FIGYELMEZTETÉSEK

Az alábbi figyelmeztetések be nem tartása esetén sérülést okozhat a mikrohullám!

(a) Sose próbálja a sütőt nyitott ajtóval működtetni, vagy ne próbálja kiiktatni az ajtó biztonsági reteszelését, és ne dugjon semmit az ajtó reteszelő nyílásaiba!

(b) Ne helyezzen semmilyen tárgyat a sütő ajtaja és előlapja közé, és ne hagyja, hogy ételmaradványok vagy tisztítószermaradványok gyűljenek össze az ajtó tömítőfelületein! Ügyeljen, hogy az ajtó és az ajtó tömítőfelületei mindig tiszták legyenek, ezért törölje le ezeket használat után egy nedves ronggyal, azután törölje szárazra!

(c) Ne használja a sütőt, ha megsérült, hanem először feltétlenül javíttassa meg egy a gyártó által betanított szerelővel!
Nagyon fontos, hogy a sütő ajtaja jól csukódjék, és hogy ne legyen sérült:
(1) Az ajtó, az ajtó tömítése és a tömítőfelületek
(2) Az ajtó forgópántja (ne legyen eltörve vagy meglazulva)
(3) Aa villamos csatlakozókábel!

(d) A sütőt kizárólag csak a mikrohullámú készülékek szervízelésére kiképzett, a gyártó által betanított szerelőnek szabad javítania!

Biztonsági figyelmeztetések

Mielőtt ételt vagy folyadékot melegít a mikrohullámú sütőben, ellenőrizze az alábbi biztonsági figyelmezetések betartását!

1 NE HASZNÁLJON fémedényt a mikrohullámú sütőben:

- Fémdobozokat
- Arany vagy ezüst csíkkal díszített porcelánt
- Fémnyársat, villát, stb.!

Ok: Ilyenkor villamos ív vagy szikrázás jön létre a sütőben, mely tönkreteheti azt.

2 NE MELEGÍTSEN:

- Hermetikusan lezárt palackokat, befőttes üvegeket, edényeket
  Például: zárt bébiételes üvegeket
- Zárt héjú ételeket
  Például: tojást, héjában lévő mogyorót, paradicsomot!

Ok: A keletkező belső nyomás fölrobbanthatja ezeket.

Tanács: Vegye le a fedelet, illetve szurkálja át egy villával a héjat!

3 NE MŰKÖDTESSE üresen a mikrohullámú sütőt!

Ok: Tönkremehetnek a sütő falai.

Tanács: Hagyjon mindig egy pohár vizet a sütőben! A víz elnyeli a mikrohullámokat, ha véletlenül üresen kapcsolja be a sütőt.

4 NE TAKARJA LE az oldalsó vagy a hátsó szellőzőnyílásokat konyharuhával vagy papírral!

Ok: A rongy vagy a papír meggyulladhat a sütőből kilépő forró levegőtől.

5 MINDIG használjon edényfogó kesztyűt, amikor kivesz egy edényt a sütőből!

Ok: Egyes edények elnyelik a mikrohullámokat, ezenkívül az étel is mindig fölmelegíti az edényt. Ezért az edény forró lehet!

6 NE ÉRINTSE meg a fűtőelemet vagy a sütő falait!

Ok: A sütő falai forrók lehetnek, a sütés befejezése után is! Ne engedje, hogy gyulékony anyagok érintkezzenek a sütő belsejével, amig a sütő ki nem hűl!

7 Hogy ne keletkezzék tűz a sütőben:

- Ne tároljon gyúlékony anyagokat benne,
- Vegye le a drótzárakat a papírzacskókról vagy a műanyagzacskókról,
- Ne használja a sütőt ujságpapír szárítására,
- Ha füstöt vesz észre, tartsa csukva az ajtót és kapcsolja ki a sütőt vagy szakítsa meg a sütő áramellátását!

Biztonsági figyelmeztetések

H

8 Legyen nagyon óvatos, ha folyadékot vagy bébiételt melegít:

- MINDIG hagyjon legalább 20 mp-nyi pihentetési időt a sütő kikapcsolása után, hogy kiegyenlítődhessék a hőmérséklet!
- Keverje meg a bébiételt vagy a folyadékot a melegítés közben ha szükséges, és MINDIG keverje meg a melegítés után!
- A hirtelen felforrás és az esetleges leforrázás megelőzése végett keverje meg a folyadékot a melegítés előtt, közben és után!
- Ha leforrázná magát, tartsa be az alábbi ELSŐSEGÉLYNYúJTÁSI UTASÍTÁST:
  - Mártsa a kezét hideg vízbe legalább 10 percig!
  - Kötözze be tiszta, száraz kötszerrel.
  - Ne tegyen a sebre semmilyen krémet, olajat vagy oldatot!
- SOSE töltse meg színültig az edényt folyadékkal, és olyan edényt használjon, mely fölül szélesebb, mint alul, nehogy kifuthasson a folyadék! A szűknyakú palackok felrobbanhatnak, ha túlhevülnek!
- Ellenőrizze MINDIG a bébiétel vagy a tej hőmérsékletét, mielőtt a babának adja!
- SOSE melegítse a bébiételt úgy, hogy rajta van a kupak, mert fölrobbanhat az üveg, ha túlmelegszik!

9 Ügyeljen a hálózati csatlakozókábelre:

- Ne mártsa a kábelt vagy a hálózati csatlakozódugaszt vízbe, és tartsa távol a hőforrásoktól!
- Ne használja a sütőt sérült csatlakozókábellel vagy a hálózati csatlakozódugasszal!

10 Álljon karnyújtásnyira az sütőtől, amikor kinyitja az ajtót!

Ok: A kiáramló forró levegő vagy gőz leforrázhatja!

11 Tartsa tisztán a mikrohullámú sütő belsejét!

Ok: A sütő falaira vagy aljára rásült élelmiszer darabok vagy zsírfoltok károsíthatják a festékréteget, és csökkenthetik a sütő hatásfokát.

12 "Kattanó" hang hallható a sütő működése közben, különösen felolvasztás közben.

Ok: A vezérlés módosította a sütő teljesítményét, ennek hangja hallható. Ez normális.

13 Ha a mikrohullámú sütőt üresen, terhelés nélkül használják, a sütő automatikusan kikapcsol a biztonság érdekében. Kb. 30 perc múlva a sütő újra használható.

14 Ne törődjék azzal, ha a főzés befejezése után a sütő még tovább működik.

Ok: Ilyenkor a sütő lehűti a belső villamos részeket a főzés után. (A kijelzőn "0" látható).
Nyissa ki az ajtót vagy nyomja meg bármely gombot (az "1min +" gomb kivételével)a sütő leállításához.

FONTOS BIZTONSÁGI FIGYELMEZTETÉS

Ha műanyaggal bevont papír vagy egyéb éghető csomagolású ételt melegít vagy főz, nézzen be időnéknt a sütőbe!

FIGYELEM!

Ne engedje, hogy kisgyerekek használják vagy játsszanak a mikrohullámú sütővel!
Ne hagyjon kisgyerekeket felügyelet nélkül a mikrohullámú sütő közelében, ha használja azt!
Ne tároljon, vagy dugjon el gyerekeket érdeklő tárgyakat közvetlenül a sütő fölött!

Tartozékok

A mikrohullámú sütőnek, az Ön által megvásárolt típustól függően, számos tartozéka van, melyek különböző módon használhatók.

1 **Csatlakozó**, a gyárban már felrakták a mikrohullámú sütő motorjának tengelyére.

Szerepe: A csatlakozó forgatja az üvegtányért.

2 **Görgősgyűrű**, a sütő közepére kell elhelyezni.

Szerepe: A görgősgyűrű tartja az üvegtányért.

3 **Üvegtányér,** a görgősgyűrűre kell rárakni, úgy, hogy a közepe a csatlakozón legyen.

Szerepe: Az üvegtányér szolgál főzési felületként; tisztításhoz könnyen kivehető.

4 **Fémállvány**, az ügegtányérra kell rárakni.

Szerepe: A fémállvány segítségével egyszerre két étel főzhető. Egy kisebb átmérőjű étel elhelyezhető az üvegtányéron, egy második étel pedig az állványon. A fémállvány grillezéshez és kombinált főzéshez használható.

☛ TILOS a mikrohullámú sütőt a görgősgyűrű és az üvegtányér nélkül használni!

1



2



3

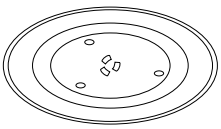

4

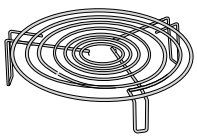

A mikrohullámú sütő elhelyezése

H

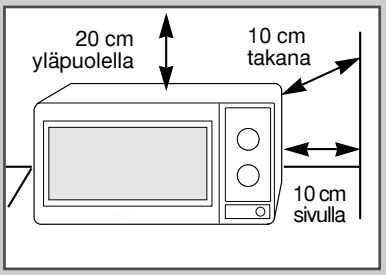

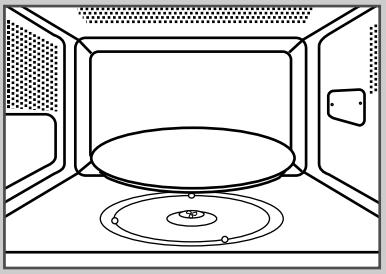

Helyezze el a sütőt egy sík, vízszintes és stabil felületen.

1	A sütő elhelyezésekor ügyeljen arra, hogy a sütő megfelelően szellőzhessék, ezért hagyjon legalább 10 cm szabad teret a sütő mögött és mindkét oldalán, és 20 cm-t a sütő fölött.
2	Szedje ki az összes csomagolóanyagot a sütőből. Rakja be a sütőbe a görgősgyűrűt és a forgóasztalt. Ellenőrizze, hogy a forgóasztal szabadon elforog-e.

☛ Ne fedje le a sütő szellőzőnyílásait, mert a sütő túlhevülhet és automatikusan kikapcsolhatja magát. Ilyenkor nem működik, amíg megfelelően le nem hűl.

☛ Az ön személyi biztonsága érdekében a mikrohullámú sütőt egy megfelelően földelt, AC 230 V, 50 Hz váltóáramú konnektorhoz kell csatlakoztatni. Ha megsérül a csatlakozókábel, akkor az csak speciális kábellel (I-SHENG SP022, KDK KKP4819D, EURO ELECTRIC 3410, SAMIL SP-106B, MOONSUNG EP-48E) cserélhető ki. Forduljon a Samsung kirendeltséghez.

☛ Ne állítsa fel a mikrohullámú sütőt forró vagy párás környezetben, például egy hagyományos kályha vagy egy radiátor közelében. A sütő áramfelvételére tekintettel kell lenni, és az esetleges hosszabbítókábelnek ugyanolyan amperszámúnak kell lennie, mint a sütő csatlakozókábele. Törölje ki nedves ronggyal a sütő belsejét és törölje le az ajtó tömítéseit, mielőtt először használja a sütőt.

Hogyan működik a mikrohullámú sütő?

A mikrohullám egy nagyfrekvenciás elektro-mágneses hullám, melyet az u.n. magnetron állít elő. A mikrohullám által szállított energia segítségével az étel megfő vagy felmelegszik anélkül, hogy megváltozna a színe vagy az alakja.

A mikrohullámot Ön a következőkre használhatja:

- *felolvasztásra,*
- *felmelegítésre,*
- *főzésre.*

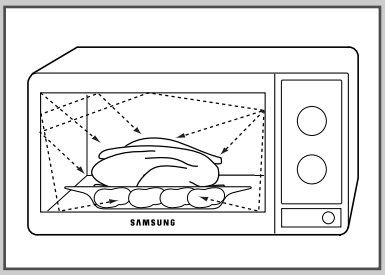

A főzés elve

1 A magnetron által létrehozott mikrohullám egyenletesen éri az ételt, mert az étel forog az üvegtányéron. Ezért az étel egyenletesen fő meg.

2 A mikrohullámot az étel felső kb. 2,5 cm-es rétege nyeli el. Onnan a hő hőátadással terjed az étel belseje felé.

3 A főzési idő az étel alábbi tulajdonságaitól függ:
- Mennyiségétől és sűrűségétől,
- Víztartalmától,
- Kiindulási hőmérsékletétől (hűtve van-e vagy nem).

☞ Mivel az étel közepe hőátadással fő meg, a főzés folytatódik azt követően is, hogy Ön kiveszi az ételt a sütőből. Ezért be kell tartani az e füzetben és a receptekben előírt pihentetési időt, hogy:
- Egyenletesen megfőjön az étel közepe is,
- Mindenütt egyenletes hőmérsékletű legyen az étel.

A sütő működésének ellenőrzése

Az alábbi egyszerű eljárással Ön bármikor ellenőrizheti, hogy a mikrohullámú sütő jól működik-e. Probléma esetén lásd az alábbi "Teendő probléma esetén" című pontot!

➢
- A sütőn legyen egy megfelelő hálózati csatlakozóaljzathoz kell csatlakoztatva!
- Az üvegtányér legyen a helyén a sütőben!
- Ha a maximálistól (100 % = 800 W) eltérő teljesítményt állít be, a víz később kezd el forrni!

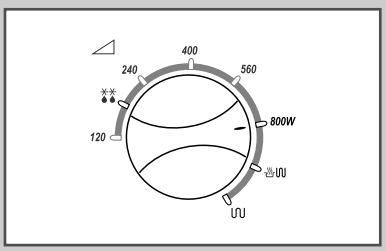

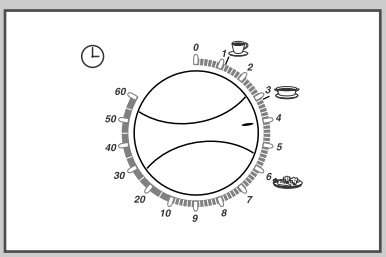

1 Nyissa ki a sütő ajtaját a vezérlőpanel jobb alsó sarkában lévő nagy ajtónyitó gombbal! Rakjon be egy pohár vizet az üvegtányérra! Csukja be az ajtót!

2 Állítsa be a maximális teljesítményt a "Teljesítmény" gombbal.

3 Állítson be 4..5 perces időt az "Idő" gombbal!

Teendő probléma esetén

H

Egy új készülék megszokása mindig eltart egy bizonyos ideig. Az alábbi felsorolásban található problémák esetén próbálkozzék az itt feltüntetett megoldásokkal! Így időt takaríthat meg és megspórolhatja a szerviz felesleges kihívását.

PROBLÉMA	TEENDŐ/MEGOLDÁS
◆ Kondenzáció a sütőben ◆ Légáram az ajtó körül ◆ Fénykiszüremlés az ajtó körül ◆ Gőz lép ki az ajtónál és a szellőzőnyílásokból	Ezek normális jelenségek
A sütő nem kezd működni az “Idő” elforgatásakor	◆ Csukva van az ajtó?
Az étel egyáltalán nem fő meg	◆ Jól állította be az “Idő”-t? ◆ Becsukta az ajtót? ◆ Nem terhelte túl a villamos áramkört és ezért nem olvadt ki a biztosíték vagy nem szakított meg a biztosító automata?
Az étel vagy túlfő vagy nem fő meg eléggé	◆ A főzési időt az étel fajtá-jának megfelelően állította be? ◆ Megfelelő teljesítményt választott?
Szikrázás van a sütőben	◆ Nem használ fémcsíkkal ellá- tott edényt? ◆ Nem hagytott egy villát vagy más fémtárgyat a sütőben? ◆ Nincs alumíniumfólia túl közel a belső falakhoz?
A sütő zavarja a tévé-és a rádióvételt.	◆ Kismértékű zavarás normális, ha működik a sütő. Megoldás: A sütőt a tévétől, rádiótól vagy az antennáktól távol kell elhelyezni!. ◆ Ha a zavarás a sütő mikropro-cesszorára is hat, a kijelző elállítódhat. Megoldás: Húzza ki a csatlako-zódugaszt, majd dugja vissza! Állítsa be újra az órát!

Ha Ön a fenti utasítások elolvasása után sem képes megoldani a problémát, akkor:

- ***Írja le a sütő modellszámát és gyártási számát a sütő hátlapjáról,***
- ***Keresse elő a garanciajegyet (vásárlás dátuma és helye),***
- ***Fogalmazza meg a problémát!***

Ezután vegye föl a kapcsolatot a legközelebbi SAMSUNG szervizzel!

Főzés/felmelegítés

Az alábbi egyszerű leírás elmagyarázza, hogyan főzhet meg vagy melegíthet fel egy ételt.

☛ Ellenőrizze mindig a sütő beállítását, mielőtt felügyelet nélkül hagyja a sütőt!

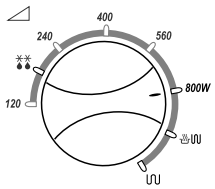

1 Nyissa ki az ajtót a vezérlőpanel jobb alsó sarkában lévő nagy gomb megnyomásával! Rakja be az ételt az üvegtányér közepére! Csukja be az ajtót!

2 Állítsa a maximális állásba a “Teljesítmény” gombot!

Modell	G2618C
Max. teljesítmény	800W

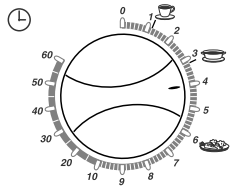

3 Állítsa be a főzési/melegítési időt az “Idő” gombbal.

Következmény: A sütő világítása kigyullad, és az üvegtányér forogni kezd. Elkezdődik a főzés/melegítés.

➢ Ön megváltoztathatja a teljesítményt főzés közben a “Teljesítmény” gomb eforgatásával.

A főzés megszakítása

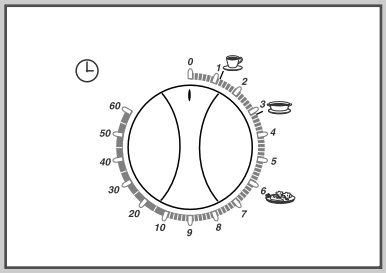

Ön bármikor megszakíthatja a főzést, hogy:

- *Ellenőrizze az ételt,*
- *Mgfordítsa vagy megkeverje az ételt,*
- *Pihentesse az ételt.*

A főzés megszakítása...	**Teendő**
...ideiglenesen:	◆ Nyissa ki az ajtót! Következmény: leáll a főzés. A főzés folytatásához csukja be az ajtót!
...véglegesen:	Állítsa “0”-ra az “Idő” gombot!

A főzési idő meghosszabbítása

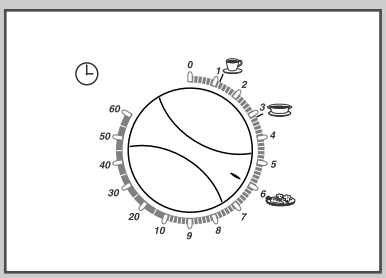

A hagyományos főzéshez hasonlóan előfordulhat, hogy főzés közben Ön úgy találja, kissé módosítani kell a főzési időn.

A lehetőségek:

- *Bármikor ellenőrizheti az ételt, ha kinyitja az ajtót,*
- *Növelheti vagy csökkentheti a főzési időt.*

A főzési idő meghosszabbításához állítsa az “Idő” gombot a kívánt új értékre!

➢ A főzési idő a főzés közben csak a mikrohullámú, a grillező és a kombinált (mikrohullám + grill) módban módosítható .

Ételek felolvasztása

1	Nyissa ki a sütő ajtaját ajobb alsó sarokban lévő ajtónyitó gombbal.
2	Rakja be a mélyhűtött ételt és csukja be az ajtót!
3	Állítsa a **"Teljesítmény"** gombot a felolvasztás szimbólumára ( ).
4	Állítsa be az **"Idő"** gombbal a kívánt felolvasztási időt. Következmény: Elkezdődik a felolvasztás.

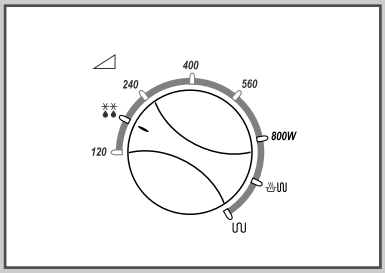

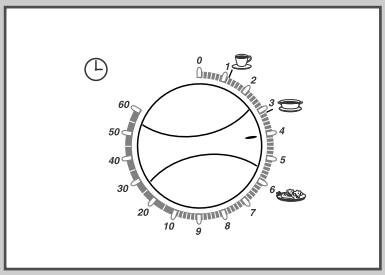

Ételek azonnali melegítése

1	Rakja be az ételt a sütőbe és csukja be az ajtót.
2	Állítsa a **"Teljesítmény"** gombot a maximális állásba.
3	Állítsa az "Idő" gombot az azonnali melegítés kívánt szimbólumára (italok, leves/mártás vagy friss gyümölcs).

➢ *Az azonnali melegítésre vonatkozó paramétereket az alábbi táblázat tartalmazza.*

Szimbólum	Megnevezés	Adagnagyság	Pihentetési idő
	Italok	150 ml	1-2 min
	Leves/mártás	200-300 ml	2 min
	Friss zöldség	200-300 g	2 min

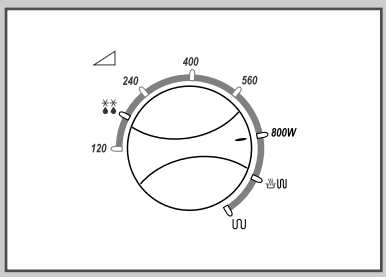

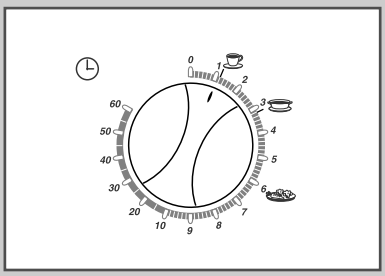

Főzési teljesítmények táblázata

H

A "Teljesítmény" gombbal Ön beállíthatja a sütő teljesítményét és ezzel az étel felmelegítéséhez vagy megfőzéséhez szükséges időt. Több teljesítmény közül választhat:

TELJESÍTMÉNY-FOKOZAT	*%*	*G2618C*	
		MIKRO	*GRILL*
Nagy	100 %	800 W	-
Középnagy	70 %	560 W	-
Közepes	50 %	400 W	-
Középkicsi	30 %	240 W	-
Felolvasztás( )	20 %	160 W	-
Kicsi	15 %	120 W	-
Grillezés	-	-	1000 W
Kombinált	100 %	800 W (18%)	1000 W (82%)

A főzési receptekben és az e Használati utasításban szereplő főzési idők az ott feltüntetett teljesítményeknek felelnek meg.

Nagyobb teljesítményhez rövidebb főzési idő, kisebb teljesítményhez hosszabb főzési idő tartozik.

Grillezés

H

A grillezéssel Ön gyorsan megsütheti és megbarnúthatja az ételt, mikrohullám használata nélkül. A grillezéshez egy grillező állványt mellékeltünk a sütőhöz.

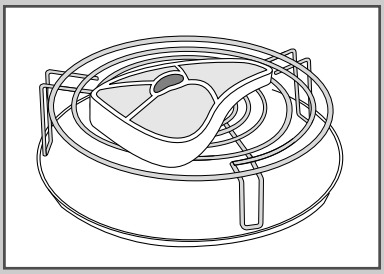

☛ Használjon mindig edényfogó kesztyűt, amikor megfogja a sütőben lévő edényt, mert az nagyon forró lehet.

1 Melegtse elő a sütőt a kívánt hőmérsékletre a “Teljesítmény” gombot a grillezés szimbólu(⎍⎍) mára állítva, és az “Idő” gombot a megfelelő értékre elforgatva.

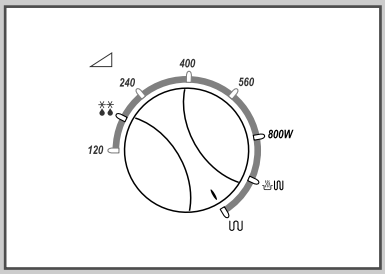

2 Nyissa ki az ajtót és rakja be az ételt az állványra.

3 Állítsa a (⎍⎍) gombot a grillezés szimbólumára.

4 Állítsa az idô gombot a megfelelô értékre.

Következmény: Elkezdődik a grillezés.

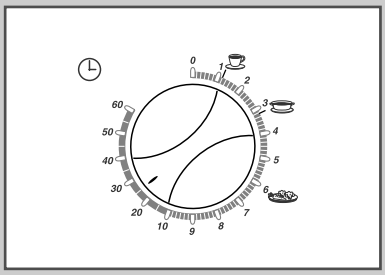

➢ Nem baj, ha a sütô grillezés közben ki- majd bekapcsol, ez a túlmelegedés megelôzését szolgálja.

Használható edények

H

A mikrohullámú sütőben csak akkor fő meg az étel, ha a mikrohullámok át tudnak hatolni az ételt tartalmazó edény falán, tehát az edény nem veri vissza vagy nyeli el őket.

Ezért gondosan kell megválasztani az edényeket. Ha az edényen fel van tüntetve, hogy mikrohullámú sütőhöz használható, akkor az biztosan megfelelő.

Az alábbi táblázat felsorolja a különböző edényfajtákat, és közli, hogy azok miként használhatók a mikrohullámú sütőben.

EDÉNY	MIKROHULLÁM-ÁLLÓSÁG	MEGJEGYZÉS
Alumíniumfólia	✔ ✘	Kis mennyiségben használható a túlsülés elleni védelemhez. Szikrázás jöhet létre, ha a fólia túl közel van a sütő falához, vagy ha túl sokat használnak belőle!
Pirítótányér	✔	Ne melegítse elő 8 percnél tovább!
Porcelán- és cserépedény	✔	A porcelán, a cserép, a mázas porcelán általában használható, ha nincs fémcsíkkal díszítve.
Eldobható poliészter karton	✔	Egyes mélyhűtött ételeket ilyen edényekbe edények csomagolnak.
Gyorsétel csomagolások		
• Polisztirén csészék és dobozok	✔	Használható az étel melegítéséhez. Túlmelegítés esetén a polisztirén megolvadhat.
• Papírzacskók vagy újságpapír	✘	Meggyulladhat.
• Újrahasznosított papír vagy fémszegélyek	✘	Szikrázást okozhat.
Üvegáru		
• Jénai edény	✔	Használható, ha nincs fémcsíkkal díszítve.
• Finomüvegáru	✔	Használható étel vagy folyadékok melegítéséhez. A vékony üveg megrepedhet vagy eltörhet, ha túl gyorsan felmelegszik.
• Üvegkancsók	✔	Le kell venni a fedelet. Csak melegítéshez használhatók.
Fém		
• Edények	✘	Szikrázást vagy tüzet okozhatnak.
• Mélyhűtőzacskót lezáró drót	✘	Szikrázást vagy tüzet okozhat.
Papír		
• Tálcák, csészék, szalvéták	✔	Rövid főzéshez és melegítéshez, valamint a fölösleges nedvesség elnyeléséhez.
• Újrahasznosított papír	✘	Szikrázást okozhat.
Műanyag		
• Dobozok	✔	Különösen, ha hőálló műanyagból készültek. A többi műanyag deformálódhat vagy elszineződhet magas hőmérsékleten. Ne használjon melamin műanyagot!
• Takaró fólia	✔	A nedvesség visszatartásához használható. Ne érjen a fólia az ételhez! Legyen óvatos a fólia eltávolításakor, mert forró gőz léphet ki!
• Mélyhűtő zacskók	✔ ✘	Csak ha forrás-állóak vagy mikrohullám-állóak. Ne záródjanak hermetikusan. Szükség esetén lyukassza ki őket egy villával!
Viaszolt vagy zsírpapír	✔	Használhatók a nedvesség visszatartására és a fröcskölés megelőzésére.

H

Néhány sütési tanács

Az étel elrendezésénél tartsa be az alábbi tanácsokat, hogy egyenletesen süljön meg az étel a mikrohullámú sütôben. NE FELEDKEZZÉK el a pihentetési idôrôl.

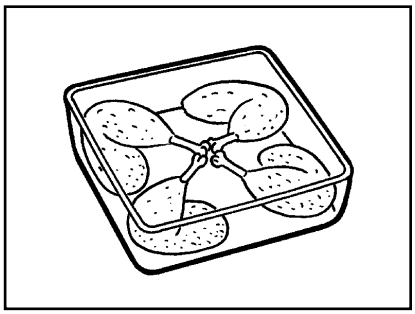

Az étel vékonyabb részei, melyek gyorsabban sülnek meg, legyenek az edény közepe felé elhelyezve.

Példák: Csirkecomb, bárányborda, egész hal

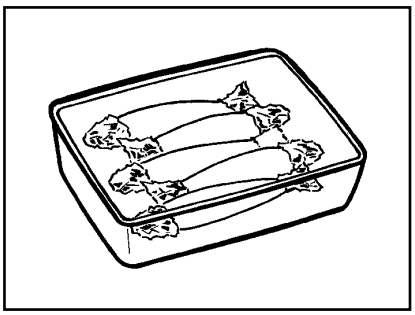

Borítsa be alumíniumfóliával az étel legvékonyabb részét, hogy nehogy túlsüljön (az alumínium-fólia ne érjen a sütô falához).

Példa: Egész hal feje és farka, egész csirke szárnya

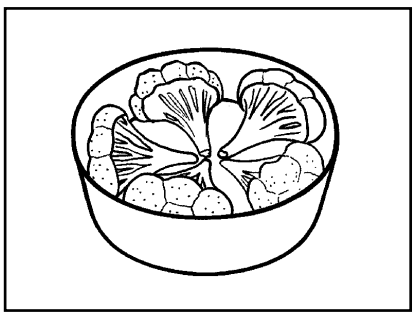

Ha ugyanabból az ételfajtából több darabot akar elkészíteni, válasszon ki egyforma darabokat, és helyezze el ôket kör alakban az edényben.

Példa: Burgonyák, karfioldarabok, paradicsomok

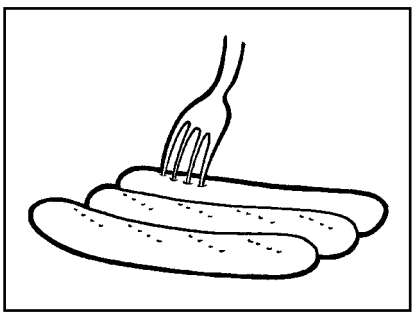

Az ételek bôrét egy villával ki kell lyuggatni, hogy eltávozhassék a gôz és ne repedjen fel a bôr.

Példa: Burgonya, paradicsom, kolbász, tojás sárgája, egész hal

Mértékegységek átszámitási táblázata

Unoia	*Megközelítő értékek(g/ml)*
1	25
2	50
3	75
4 (1/4 lb)	100
5 (1/4 pint)	150
6	175
7	200
8 (1/2 lb)	225
9	250
10 (1/2 pint)	275
11	300
12 (3/4 lb)	350
13	375
14	400
15 (3/4 pint)	425
16 (1 lb)	450
17	475
18	500
19	550
20 (1 pint)	575

Felmelegítés

H

ÉTEL		SÜTÉSI IDô (Perc)	TELJESÍTMÉNY	MEGJEGYZÉS
Fô FOGÁSOK	Egytálételek 1 tányér 2 tányér 4 tányér	 2-3 3-4 1/2 6-8	70 %	• Öntse rá a mártást a húsra, a hús és a zöldségek a tányér szélén legyenek. • Fordítsa meg az idô felénél. • Rakja rá egy tányérállványra.
	Fôtt hús, csirke, hús-szelet, burgerek, stb. 1 adat 2 adag	 1 1/2-3 2 1/2-4 1/2	70 %	• Fedje le sütôfóliával. • Rendezze át egyszer sütés közben.
	Megkeverhetô raguk 1 adag 2 adag 4-6 adag	 2-4 4-6 6-10	70 %	• Fedje le sütôfóliával.. • Keverje meg jól 1 perc múlva.
	Nem megkeverhetô ételek, (pl. lasagne) 1 adag 2 adag 4 adag	 5-8 9-12 12-16	 30 % 30 % 50 %	• Fedje le sütôfóliával. • Forgassa meg a tálat 2 percenként.
ZÖLDSÉGEK, FôZELÉKEK	1 adag 2 adag 4 adag	1-1 1/2 1 1/2-3 3 1/2-6	100 %	• Fedje le sütôfóliával. • Keverje meg jól a félidônél.
MAGAS KEMÉNYITÔ TARTALMÚ ÉTELEK	Pite 1 családi pite, mélyh. 1 adag pite 2 adag pite Húsos pite 1 adag pite 4 adag pite	 7-10 2 3 1/2-4 1/4-1/2 3/4-2 1/2	 70 % 100 % 100 % 100 % 100 %	• Ha szükséges, vegye ki a fólia-tálcából. • Rakja rá nedvszívó konyhapapírra, és ezzel fedje is le.
	Pizza 1 egész pizza 1 szelet pizza	 3-4 1 1/2-2	 70 % 100 %	---
	Rizs 1 adag, elôfôtt 4 adag, elôfôtt Currys rizs	 2-3 8-10 3-5	 70 %	• Tegyen rá egy kis tejfölt vagy vajat, hogy: - nedvesebbé váljék - ne ragadjon össze
	Fôtt tészta 1 adag 4 adag	 3-4 10-12	 100 %	• Tegyen rá egy kis tejfölt vagy vajat, hogy: - nedvesebbé váljék - ne ragadjon össze
KONZERV ÉTELEK 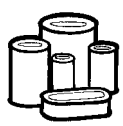	Készételek (sült zöldbab. spagetti), levesek és rizspuding 200 g 425 g	 2-3 3-4	 100 %	• Rakja át egy mikrohullámálló tálba. • Fedje le sütôfóliával. • Keverje meg jól 1 és 2 perc múlva.
PUDINGOK	Normál puding 1 adag 4 adag Karácsonyi puding 1 adag Egész (450 g)	 1-1 1/2 2-3 1/2-1 4-5	 100 % 100 % 70 %	• Fedje le sütôfóliával. • Felszolgálás elôtt pihentesse 2-3 percig, különösen ha lekvár van a tetején. • Melegítse fel óvatosan egy lefedetlen tálban, mert túlhevítés esetén meggyulladhat a puding a nagy alkohol- és cukortartalom miatt.

Felolvasztás

ÉTEL		SÜTÉSI IDô (Perc/450 g)	PIHENTETÉSI IDô (Perc)	MEGJEGYZÉS
HÚS 	Egybesült húsok (marha, birka, disznó, stb.)	8-11	20-30	• A vékony részeket fedje le fóliával. • Fordítsa meg kétszer felolvasztás közben.
	Vagdalt marha/birka	7 - 9	10 - 15	• Válassza szét ôket gyakran. • A felolvadt darabokat vegye ki minél hamarabb, és pihentesse.
	Hússzelet, disznóborda, birkaborda	6 - 9	10 - 15	• Fordítsa meg a félidônél. • A vékony részeket fedje le fóliával, ha szükséges.
	Kolbász, szalonna	4 - 5	5	• Válassza szét és rendezze át kétszer felolvasztás közben.
	Ragu	15	5 perc félidônél 5 perc a végén	• Tördelje szét, és a felolvadt darabokat vegye ki.
	Húskockák	7 - 8	10 - 15	
BAROMFI	Egész csirke, kacsa, pulyka, stb.	8 - 10	20 - 30	• Takarja le fóliával a szárnyakat, a mellcsontot, ha szükséges. • Elôször a mellrészt olvassza le, és fordítsa meg a félidônél.
	Combok, szárnyak kicsi nagy	 6 - 8 7 - 9	 10 - 15 10 - 15	• A vékonyabb részek a tál közepén legyenek. • Forgassa meg és rendezze át kétszer a felolvasztás közben.
HALAK	Egész hal (lazac, makréla)	4 - 5	5 - 10	• Fedje le a vékony végeket fóliával, ha szükséges.
	Filék (lepényhyal, hering)	3 - 5	10 - 15	• Egy rétegben rendezze el. • Fordítsa meg egyszer felolvasztásw közben.
	Szeletek (tôkehal, lazac)	4 - 5	10 - 15	
	Garnélarákok, fésüs-kagylók)	5 - 6 (225 g-onként)	5 - 10	• Keverje meg a félidônél.
	Zacskóban fôtt hal	3 - 5	5	• Lyuggassa ki a zacskót és rakja be egy mikrohullámálló tálba. • Fordítsa meg a félidônél.
GYÜMÖ-LCSÖK	Ömlesztett, puha gyümölcs (málna, cseresznye, eper)	6 - 8	5 - 10	• Mérje le a kívánt mennyiséget. • Keverje meg egyszer, vagy rendezze át ôket a felolvasztás és a pihentetés közben.
	Ömlesztett kemény gyümölcs (alma, barack, rebarbarar)	7 - 8	5 - 10	
	Püré, gyümölcs-desszert.	7 - 10	10 - 15	• Keverje meg óvatosan felolvasztás közben.
	Gyümölcsös pite, somlói galuska, túróslepény, gyümölcsrátéttel	3 - 4	10 - 15	• Rakja rá a szervírozó tányérra.
LISZT TARTALMÚ TERMÉKEK	Kenyér Nagy szeletelt/szeleteletlen cipó	 5 - 7 / 6 - 8	 10 - 15	• Vegye ki a múanyag csomagolásból. • Rakja rá egy nedvszívó konyha-papírra. • Fordítsa meg a félidônél. • A túl hosszú felolvasztás kiszárítja a kenyeret
	Kis szeletelt/szeleteletlen cipó	3 - 5 / 4 - 6	10 - 15	
	1 szelet	10-20 mp	-	
	Kenyértekercs és kifli 1 2 4	 15 - 15 mp 30 mp 1-1 1/2	 1-2 1-2 1-2	
	Kisütetlen cukrász-sütemény	1 (225 g-onként)	20	• Vegye ki a csomagolásból. • Rakja rá egy nedvszívó konyha-papírra. • Fordítsa meg gyakran, hogy sehol se melegedjék fel.
	Töltött gyümölcskosárka (18-20 cm)	4 - 5	5 - 10	• Rakja rá egy a szervírozótányéron elhelyezett konyhapapírra. • Vegye el a papírt a szervírozás elôtt.
	Kolbásztekercsek (4)	2 - 3	5	• Csomagolja be mindegyik tekercset konyhapapírba, a nedvesség felszívásához. • Lényeges a pihentetési idô!
	Piskóta Egész Darab	 1 - 11/2 40-60 mp	 5 - 10	• Rakja rá konyhapapírra.

Hús sütése

ÉTEL		SÜTÉSI IDô (450 g-onként)	TELJESÍTMÉNY	MEGJEGYZÉS
MARHA 	Kis szelet (filé) Véresen Közepesen Jól átsütve	 6 6 - 8 8 - 9	 100 % 3 percig, azután 50 %	• Fordítsa meg a félidônél. • Pihentesse 15-25 percig.
	Vastag szelet (borda, far, lágy hús) Véresen Közepesen Jól átsütve	 10 - 12 13 14 - 15	 100 % 5 percig, azután 50 %	• Fedje be fóliával a csontot és a külsô szélt. • Fordítsa meg a félidônél. • Pihentesse 15-25 percig.
	Marhaszegy és párolt marhasült (jól átsütve)	20	100 % 5 percig, azután 30 %	• Süsse fedô alatt. • Pihentesse 20 percig.
	Beefsteak (225 g) Véresen Jól átsütve	 3 5	MED-HIGH (70%)	---
BIRKA	Puhább részek (comb, filé) Közepesen Jól átsütve	 10 - 12 12 - 14	 100 % 5 percig, azután 50 %	• Fordítsa meg a félidônél. • Pihentesse 15-25 percig.
	Keményebb részek (lapocka, csontos mell) Jól átsütve	15		
	Bordaszelet, hússzelet Jól átsütve	8 - 10	70 %	• A vékonyabb részek a tál közepén legyenek. • Pihentesse 5 percig.
SERTÉS	Lapocka Jól átsütve	10 - 12	100 % 5 perc. azután 50 %	• Fordítsa meg a félidônél. • Pihentesse 15-25 percig.
	Bordaszelet Jól átsütve	8 - 10	70 %	• A vékonyabb részek az edény közepén legyenek. • Pihentesse 5 percig.
BORJÚ	Comb, lapocka, bélszín Jól átsütve	15	100 % 5 perc. azután 50 %	• Fordítsa meg a félidônél. • Pihentesse 15-20 percig.
FÜSTÖLT SONKA	Egy darabban (jól átsütve)	10 - 12	50 %	• Fordítsa meg a félidônél. • Pihentesse 15-20 percig.
	Szeletek (jól átsütve)	6 - 8	70 %	• Fordítsa meg a félidônél. • Pihentesse 5 percig.
	Bacon 1 szelet 2 szelet 4 szelet	 3/4 - 1 1/4 1 1/2 - 2 1/4 2 3/4 - 4	100 %	• Fedje le lazán konyhapapírral.

Friss zöldségek sütése

ÉTEL		MENNYISÉG	SÜTÉSI IDŐ (Percben, 100 %-nál)	MEGJEGYZÉS
BURGONYA	Egész burgonyák, héjában	1 2 4	4 - 5 6 - 8 12 - 14	• Mossa meg és szurkálja át ôket egy villával. • Ha már teljesen megsültek, csomagolja be egy fóliába és hagyja pihenni 5 percet.
	Megtisztított és (3 cm-es) kockákra vágott biurgo-nyák	3	6 - 7	• Rakja be egy nagy tálva és fedje le jól. • Keverje meg a félidônél. • Ha pürét akar csinálni, süsse 1-2 perccel tovább.
ZÖLDBAB, BORSÓ,. stb.	Zöldbab	450 g	6 - 8	• Öntsön hozzá 30 ml vizet. • Kóstolja meg a minimális sütési idô után. • Azonnal tálalja!
	Szeletelt futóbab	450 g	5 - 6	
	Juliskabab	225 g	4 - 5	
	Zöldborsó	225 g	4 - 6	
	Msange-tout	375 g	6 - 7	
KÁPOSZTA, KARFIOL, stb. 	Káposzta (nagyra felvagdalva)	1/2 közepes	5 - 7	• Öntsön hozzá 60 ml vizet.
	Kelbimbó	450 g 225 g	8 - 10 5 - 7	
	Karfiol, széttördelve	1 fej	10	• Öntsön hozzá 60 ml vizet. • Rendezze el a karfioldarabokat úgy, hogy a vékonyabb részük a tál közepe felé legyen.
	Brokkoli	450 g 225 g	7 - 8 4 - 5	
	Spenót	450 g	5 - 6	• Süsse meg a puhább leveleket nagyon kevés vízzel. • Fedje le jól.
	Tavaszi zöldségek	450 g	7 - 8	
GYÖKERES ZÖLDSÉGEK	Sárgarépa, vékonyra szeletelve	450 g 225 g	10 6 - 7	• Öntsön hozzá 60 ml vizet.
	Cékla (hámozatlan)	4 közepes	12 - 15	
	Karórépa és fehérrépa	450 g	10 - 12	• Öntsön hozzá 60 ml vizet. • Fedje le jól. • Keverje meg a félidônél.
	Paszternák (negyedelve)	450 g		• Csomagolja be sütôfóliába, vagy süsse egy lefedett edényben.
EGYÉB ZÖLDSÉGE	Gomba	225 g	2 - 3	• Süsse lefedett edényben, olvasztott vajjal. • Ne süsse túl.
	Hagyma Egész Negyedelt	 2 nagy 4-5	 4 - 6 2 - 3	• Süsse egy lefedett edényben, víz nélkül.
	Paradicsom	2	2 - 3	• Felezze el keresztben • Hintse meg vajjal vagy reszelt sajttal. • Süsse fedô nélküli edényben.
	Courgettes	225 g	3 - 4	• Süsse egy kis vízben, hogy éppen megpuhuljon.
	Zeller (félbe vágva)	4	2 - 3	• Öntsön hozzá 30 ml vizet.
	Csöves kukorica	1 2 4	2 - 3 3 - 4 6 - 8	• Csomagolja be mindegyiket sütôfóliába vagy rakja be egy lapos edénybe. • Fordítsa meg kétszer sütés közben.
	Spárga	450 g	5 - 6	• Öntsön hozzá 60 ml vizet.
	Articsóka	1	4 - 5	• Csomagolja be sütôfóliába.
	Tök, 3 cm-es kockákra vágva	225 g	6 - 7	• Rakja be egy nagy tálba, és fedje le jól. • Keverje meg a félidônél. • Ha pürét akar készíteni, süsse 1-2 perccel tovább.

Mélyhü tött zöldségek

ÉTEL		MENNYISÉG	SÜTÉSI IDŐ (Percben, 100 %-nál)	MEGJEGYZÉS
BURGONY	Burgonyaszeletek (1 cm vastag)	1 2	4 - 5 6 - 8	• Rósejbni nem készíthetô mikrohullámú sütôben.
ZÖLDBAB, BORSÓ, stb.	Zöldbab	450 g	8 - 10	• Öntsön hozzá 30 ml vizet. • Rakja be egy lapos edénybe, és fedje le.
	Juliskabab	375 g	7 - 8	
	Zöldborsó	125 g 225 g 450 g	2 - 3 4 - 5 8	• Öntsön hozzá 30 ml vizet.
	Mange-tout	225 g	4 - 5	
	Vegyes zöldség	125 g 225 g	3 - 4 4 - 6	
KÁPOSZTA, KARFIOL. stb.	Káposzta	225 g	3 - 4	• Öntsön hozzá 45 ml vizet.
	Kelbimbó	225 g	4 - 5	• Öntsön hozzá 30 ml vizet. • Kóstolja meg a megadott minimális sütési idô után, nehogy túlsüljön.
	Karfiol	225 g	5 - 6	• Öntsön hozzá 30 ml vizet. • Rendezze át a félidônél. • Pihentesse 1-2 percet, és sózza meg.
	Brokkoli	225 g	5	Ne öntsön hozzá vizet.
	Spenót	225 g	4 - 5	---
GYÖKERES ZÖLDSÉGEK	Sárgarépa	225 g	4 - 6	• Öntsön hozzá 30 ml vizet.
EGYÉB ZÖLDSÉGEK	Csöves kukorica	1 3 - 4	2 - 3 8 - 10	• Adjon hozzá késhegynyi vajat.
	Édes kukorica	225 g	3 - 4	• Adjon hozzá 30 ml vizet.

A mikrohullámú sütő tisztítása

A mikrohullámú sütő alábbi részeit rendszeresen meg kell tisztítani, hogy ne alakuljanak zsír- és ételleraködások:

- *A belső és a külső felületeket,*
- *Az ajtót és az ajtó tömítéseit,*
- *Az üvegtányért és a görgősgyűrűt.*

☛ Ügyeljen mindig arra, hogy az ajtó tömítései tiszták legyenek, és az ajtó jól csukódjék!

1	Tisztítsa meg a sütő külsejét egy meleg szappanos vízbe mártott puha ronggyal! Azután törölje szárazra.
2	Távolítsa el a felfröcsköléseket és a szennyeződéseket a belső felületekről vagy a görgősgyűrűről egy szappanos ronggyal. Azután törölje őket szárazra.
3	A megkeményedett ételrészecskék meg-puhításához és a kellemetlen szag megszüntetéséhez rakjon be egy pohár higított citromlét az üvegtányérra és melegítse 10 percig, maximális teljesítménnyel.
4	Mosogassa el a mosogatógépálló üvegtányért, ha szükséges!

☛ Minden egyes használat után tisztitsa ki a sütőteret higitott tisztitófolyadékkal.Az esetleges sérülések elkerülése miatt várja meg amig a sütő teljesen kihül.

Tanácsok:

NE ÖNTSÖN vizet a szellőzőnyílásokba!

Ne használjon a tisztításhoz koptató termékeket vagy oldószereket!

Ügyeljen nagyon az ajtótömítések tisztítására, hogy a szennyeződések:

- ne gyűlhessenek ott össze,
- ne akadályozhassák az ajtó csukódását!

A mikrohullámú sütő tárolása és javítása

Az alábbiakra kell ügyelni a mikrohullámú sütő tárolása vagy szervizelése után.

Nem szabad a sütőt használni, ha megsérült az ajtó vagy az ajtó tömítése:

- *Eltörött a forgópánt,*
- *Megrongálódtak a tömítések,*
- *Deformálódott a sütő háza.*

A mikrohullámú sütőt csak szakképzett mikrohullámú-készülék szerelővel szabad javíttatni!

☛ NE szerelje le a sütőről a külső házat! Ha elromlott a sütő, akkor:

- Húzza ki a hálózati csatlakozódugaszt a fali konnektorból, és
- Keresse fel a legközelebbi szervizt!

A sütő tárolása

A sütőt száraz, pormentes helyen kell tárolni.

Ok: A por és a nedvesség káros hatással van a sütő működő részeire.

Műszaki specifikáció

H

A SAMSUNG folyamatosan törekszik termékei tökéletesítésére. Ezért előzetes értesítés nélkül módosíthatja az alábbi műszaki adatokat vagy a használati utasítást.

Modell	G2618C
Villamos csatlakozás	230 V ~ 50 Hz
Felvett teljesítmény	
Mikrohullám	1200 W
Grillezés	1000 W
Kombinált	1350 W
Leadott teljesítmény	800 W (IEC-705)
Üzemi frekvencia	2450 Hz
Magnetron	OM75SH(31)
Hűtés	Ventillátorral
Méretek (szélesség x mélység x magasság)	
Külső	489 x 275 x 364 mm
Belső	306 x 181 x 322 mm
Űrtartalom	17 liter
Súly	
Nettó	kb. 15.5 kg

Printed in UK

SAMSUNG

MICROWAVE OVEN

G2618C

Owner's Instructions and Cooking Guide

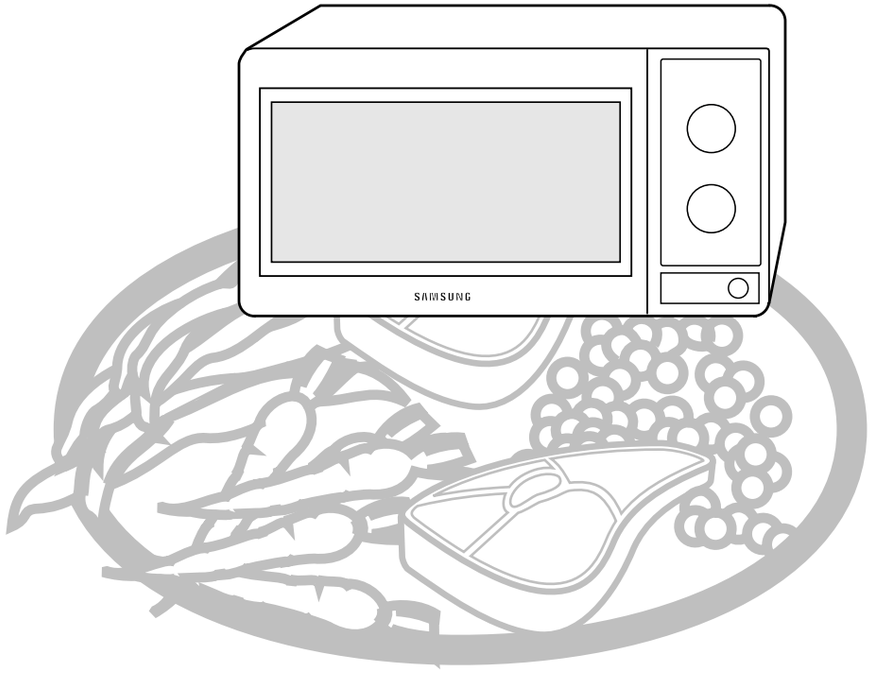

You have just purchased a SAMSUNG microwave oven.

Your Owner's Instructions contain much valuable information on cooking with your microwave oven. Take the time to read them as they will help you take full advantage of the microwave oven features.

GB

Contents

- OVEN 2
- CONTROL PANEL 3
- USING THIS INSTRUCTIONS BOOKLET 4
- INSTALLING AND PREPARING YOUR MICROWAVE OVEN
  - Safety Precautions 5
  - Accessories 7
  - Installing Your Microwave Oven 8
  - How a Microwave Oven Works 9
  - Checking that Your Oven is Operating Correctly 9
  - What to Do if You are in Doubt or Have a Problem 10
- COOKING WITH YOUR MICROWAVE OVEN
  - Cooking/Reheating 11
  - Stopping the Cooking 12
  - Adjusting Extra Time 12
  - Manual Defrosting Food 13
  - Instant Reheat Guide 13
  - Power Level and Time Variations 14
- TRADITIONAL COOKING METHODS
  - Grilling 15
- RECOMMENDATIONS FOR USE
  - CookWare Guide 16
  - Cooking Guide 17
  - Cleaning Your Microwave Oven 23
  - Storing and Repairing Your Microwave Oven 23
  - Technical Specifications 24

Oven

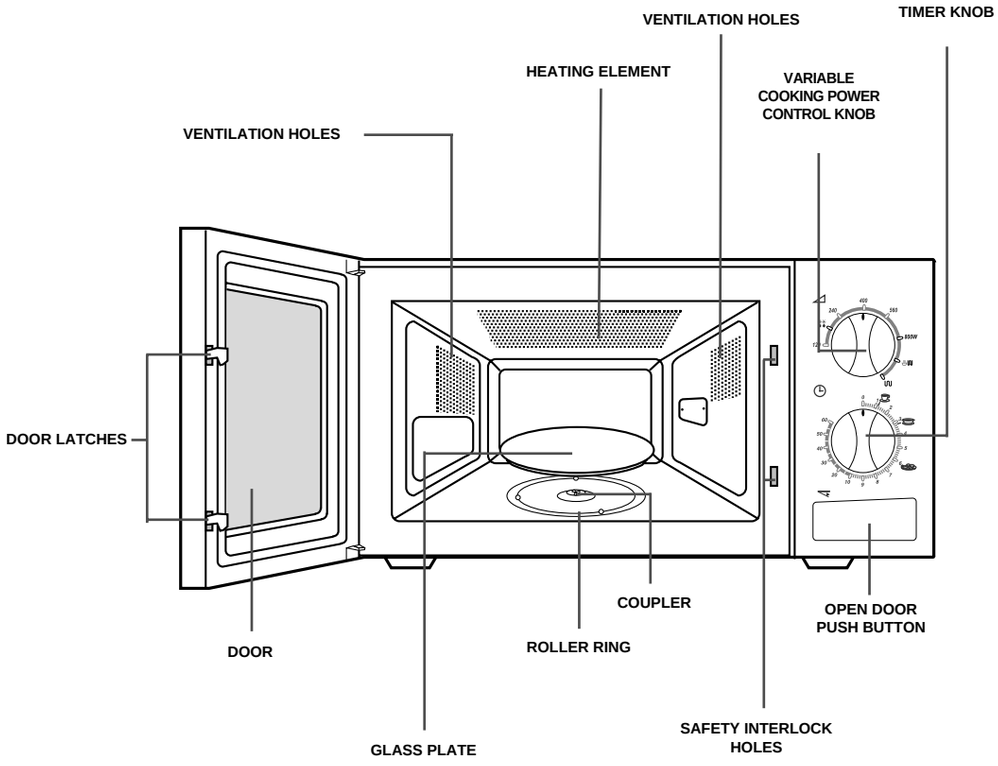
VENTILATION HOLES
TIMER KNOB
HEATING ELEMENT
VARIABLE
COOKING POWER
CONTROL KNOB
VENTILATION HOLES
DOOR LATCHES
COUPLER
OPEN DOOR
PUSH BUTTON
DOOR
ROLLER RING
SAFETY INTERLOCK
HOLES
GLASS PLATE

Control Panel

GB

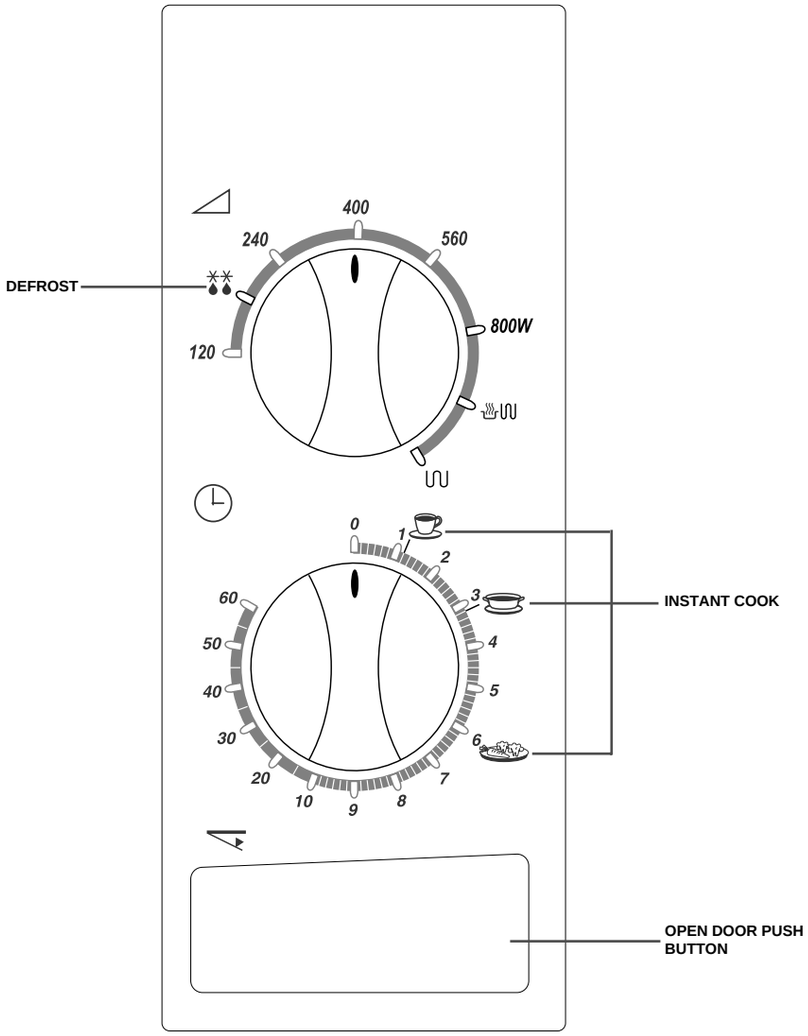

Using this Instructions Booklet

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- ***Safety precautions***
- ***Suitable accessories and cookware***
- ***Useful cooking tips***

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, corresponding to your microwave model type.

The step-by-step procedures use two different symbols.

Important

Note

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer.

It is particularly important that the oven door closes properly and that there is no damage to the:

(1) Door, door seals and sealing surfaces
(2) Door hinges (broken or loose)
(3) Power cable

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Safety Precautions

GB

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

1 DO NOT use any metallic cookware in the microwave oven:

- Metallic containers
- Dinnerware with gold or silver trimmings
- Skewers, forks, etc.

Reason: Electric arcing or sparking may occur and may damage the oven.

---

2 DO NOT heat:

- Airtight or vacuum-sealed bottles, jars, containers
  Example: Baby food jars

- Airtight food
  Example: Eggs, nuts in shells, tomatoes

Reason: The increase in pressure may cause them to explode.

Tip: Remove lids and pierce skins, bags, etc.

---

3 DO NOT operate the microwave oven when it is empty.

Reason: The oven walls may be damaged.

Tip: Leave a glass of water inside the oven at all times. The water will absorb the microwaves if you accidentally set the oven going when it is empty.

---

4 DO NOT cover the rear ventilation slots with cloths or paper.

Reason: The cloths or paper may catch fire as hot air is evacuated from the oven.

---

5 ALWAYS use oven gloves when removing a dish from the oven.

Reason: Some dishes absorb microwaves and heat is always transferred from the food to the dish.
The dishes are therefore hot.

---

6 DO NOT touch heating elements or interior oven walls.

Reason: These walls may be hot enough to burn even after cooking has finished, although they do not appear to be so. Do not allow inflammable materials to come into contact with any interior area of the oven. Let the oven cool down first.

---

7 To reduce the risk of fire in the oven cavity:

- Do not store flammable materials in the oven
- Remove wire twist ties from paper or plastic bags
- Do not use your microwave oven to dry newspapers
- If smoke is observed, keep the oven door closed and switch off or disconnect the oven from the power supply

GB

8 Take particular care when heating liquids and baby foods.

- ◆ ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to equalize.
- ◆ Stir during heating if necessary and ALWAYS stir after heating.
- ◆ To prevent eruptive boiling and possible scalding, you should stir before, during, and after heating.
- ◆ In the event of scalding, follow these FIRST AID instructions:
  - Immerse the scalded area in cold water for at least 10 minutes.
  - Cover with a clean, dry dressing.
  - Do not apply any creams, oils or lotions.
- ◆ NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.
- ◆ ALWAYS check the temperature of baby food or milk before giving it to the baby.
- ◆ NEVER heat a baby's bottle with the teat on, as the bottle may explode if overheated.

9 Be careful not to damage the power cable.

- ◆ Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
- ◆ Do not operate this appliance if it has a damaged power cable or plug.

10 Stand at arm's length from the oven when opening the door.

Reason: The hot air or steam released may cause scalding.

11 Keep the inside of the oven clean.

Reason: Food particles or spaltered oils stuck to oven walls or floor can cause the damage of painting and reduce the efficiency of the oven.

12 "Clicking" sound might be noticed while operating, especially at defrosting mode.

Reason: When the power output is changing electrically, you may hear that sound. This is normal.

13 When the microwave oven is operating without any load, the power will be cut off automatically for safety. After standing over 30 min, you can operate the oven normally.

IMPORTANT SAFETY INSTRUCTIONS

During cooking, you should look into the oven from time to time when food is being heated or cooked in disposable containers of plastic, paper or other combustible materials.

IMPORTANT

Young children should NEVER be allowed to use or play with the microwave oven.
Nor should they be left unattended near the microwave oven when it is in use.
Items of interest to children should not be stored or hidden just above the oven.

Accessories

GB

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

1 **Coupler**, already placed over the motor shaft in the base of the oven.

Purpose: The coupler rotates the glass plate.

2 **Roller ring**, to be placed in the centre of the oven.

Purpose: The roller ring supports the glass plate.

3 **Glass plate**, to be placed on the roller ring with the centre fitting on to the coupler.

Purpose: The glass plate serves as the main cooking surface; it can be easily removed for cleaning.

4 **Metal rack**, to be placed on the glass plate.

Purpose: The metal rack can be used to cook two dishes at the same time. A small dish may be placed on the glass plate and a second dish on the rack. The metal rack can be used in grill and combination cooking

☞ DO NOT operate the microwave oven without the roller ring and the glass plate.

1

2



3

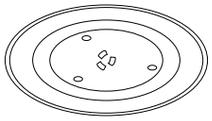

4

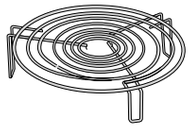

Installing Your Microwave Oven

GB

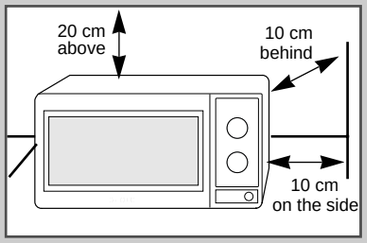

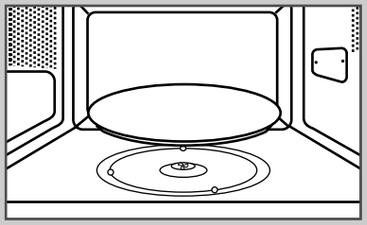

Place the oven on a flat, level surface strong enough to safely bear the weight of the oven.

1 When you install your oven, Make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind, on the sides of the oven and 20 cm (8 inches) of above.

2 Remove all packing materials inside the oven.
Install the roller ring and turntable.
Check that the turntable rotates freely.

☛ **Never** block the air vents as the oven may overheat and automatically switch itself off.
It will remain inoperable until it has cooled sufficiently.

☛ For your personal safety, plug the cable into a 3-pin, 230 Volt, 50Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable (I-SHENG SP022, KDK KKP4819D, EUROELECTRIC 3410, SAMIL SP-106B, MOONSUNG EP-48E). Contact your local dealer to have it replaced. The power cable of ISRAEL is PENCON(ZD16A), S/AFRICA APEX LEADS SA16 and NIGERIA, GHANA, KENYA and U.A.E is PENCON(UD13A1).

☛ **Do not** install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator.
The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven.
Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

How a Microwave Oven Works

GB

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- ***Defrost***
- ***Reheat***
- ***Cook***

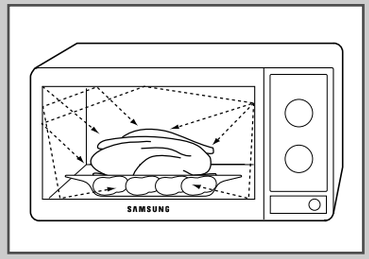

<u>Cooking Principle</u>

1 The microwaves generated by the magnetron are distributed uniformly as the food rotates on the glass plate. The food is thus cooked evenly.

2 The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.

3 Cooking times vary according to the recipient used and the properties of the food:

- Quantity and density
- Water content
- Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre
- The same temperature throughout the food

Checking that Your Oven is Operating Correctly

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "What to Do if You are in Doubt or Have a Problem" on the next page.

- The oven must be plugged into an appropriate wall socket.
- The glass plate must be in position in the oven.
- If a power level other than the maximum is used, the water takes longer to boil.

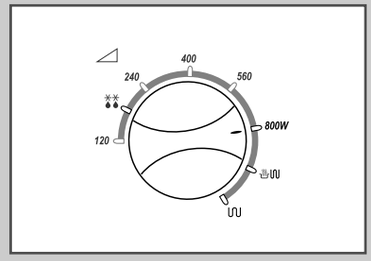

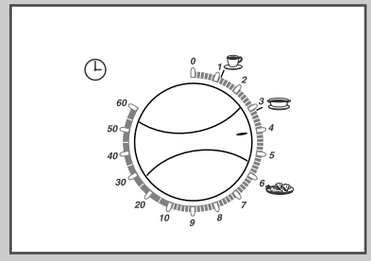

1 Open the oven door. Place a bowl of water on the glass plate. Close the door.

2 Set the power level to maximum by turning COOKING POWER CONTROL knob.

3 Set the time to 4 to 5 minutes by turing the TIMER knob.

What to Do if You are in Doubt or Have a Problem

Becoming familiar with a new appliance always takes a little time. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

Problem	Checks/Explanation/Solution
◆ Condensation inside the oven ◆ Air flow around the door and outer casing ◆ Light reflection around the door and outer casing ◆ Steam escaping from around the door or vents	This is normal.
The oven does not start when you turn the TIMER knob.	◆ Is the door completely?
The food is not cooked at all	◆ Have you set the timer correctly? ◆ Is the door closed? ◆ Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?
The food is either overcooked or undercooked	◆ Was the appropriate cooking length set for the type of food? ◆ Was an appropriate power level chosen?
Sparking and cracking occur inside the oven (arcing)	◆ Have you used a dish with metal trimmings? ◆ Have you left a fork or other metal utensil inside the oven? ◆ Is aluminium foil too close to the inside walls?
The oven causes interference with radios or televisions	◆ Slight interference may be observed on televisions or radios when the oven is operating. This is normal. Solution: Install the oven away from televisions, radios and aerials.

If the above guidelines do not enable you to solve the problem, take a note of:

- ***The model and serial numbers, normally printed on the rear of the oven***
- ***Your warranty details (date and place of purchase)***
- ***A clear description of the problem***

Then contact your local dealer or SAMSUNG after-sales service.

Cooking/Reheating

GB

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended.

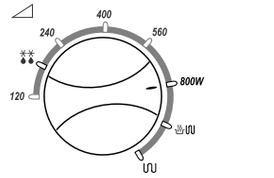

1 Open the oven door by pushing the large button in the button right-hand corner of the control panel. Place the food in the centre of the glass plate. Close the door.

2 Set the power level to maximum by turning COOKING POWER CONTROL knob.

Model	G2618C
MAXIMUM POWER	800W

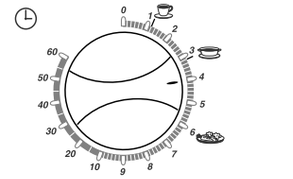

3 Set the time by turning TIMER knob.

Result: The oven light comes on and the glass plate starts rotating. Cooking starts.

You can change the power level during cooking by turning the COOKING POWER CONTROL knob.

Stopping the Cooking

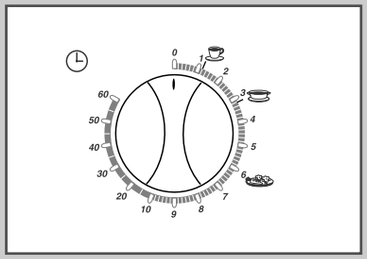

You can stop cooking at any time so that you can:

- ***Check the food***
- ***Turn the food over or stir it***
- ***Leave it to stand***

To stop the cooking...	Then...
Temporarily	◆ Open the door Result: Cooking stops. To resume cooking, close the door.
Completely	Turn the TIMER knob to '0'..

Adjusting Extra Time

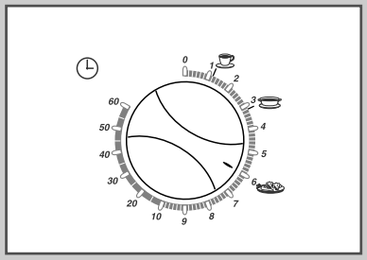

Like traditional cooking, you may find that, depending on the food's characteristics or your tastes, you have to adjust the cooking times slightly. You can:

- ***Check how cooking is progressing at any time simply by opening the door***
- ***Increase the remaining cooking time***

To increase the cooking time of your food, simply move the TIMER knob to any increased setting that you require.

➢ You can only adjust the time during cooking when the microwave grill or alternating function of microwave and grill are selected.

Manual Defrosting Food

GB

1 Open the oven door by pushing the large button in the button right-hand corner of the control panel.

2 Place the frozen food in the oven and close the door.

3 Turn the COOKING POWER CONTROL knob to defrost symbol (⁂).

4 Turn the TIMER knob to select the appropriate time.

Result: Defrosting begins.

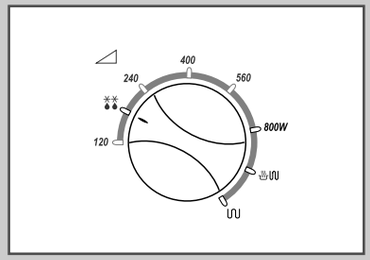

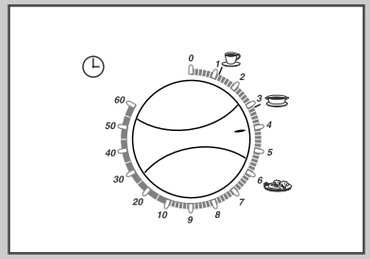

Instant Reheat Guide

1 Place the food in the oven and close the door.

2 Turn the COOKING POWER CONTROL knob to Max Power.

3 Turn the TIMER knob to select instant cook,(drinks, soup/sauce and fresh vegetable).

➢ Refer to the table below about instant cook.

Symbol	Recipes	Serving size	Standing Time
	Drinks (Reheating)	150 ml	1 - 2 mins.
	Soup/ Sauce (Reheating)	200~300 ml	2 mins.
	Fresh Vegetables (Cooking)	200 ~ 300 g	2 mins.

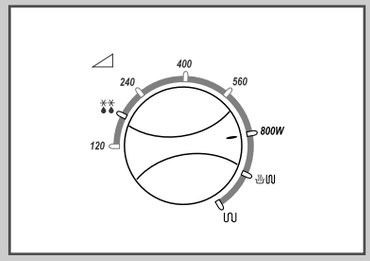

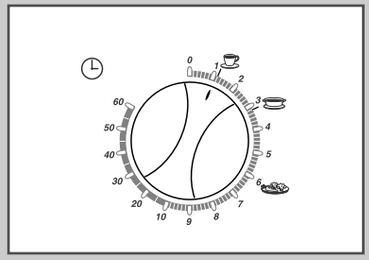

Power Levels and Time Variations

Operation ;

Set the COOKING POWER CONTROL knob to the appropriate power level by turning it.

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between several power levels.

POWER LEVEL	*%*	*G2618C*	
		MWO	*GRILL*
HIGH	100%	800W	-
MEDIUM HIGH	70%	560W	-
MEDIUM	50%	400W	-
MEDIUM LOW	30%	240W	-
DEFROST ( )	20%	160W	-
LOW	15%	120W	-
GRILL ( )	-	-	1000W
Alternating function of MW and GRILL	100%	800W	1000W
Proportion of the time during the running function for 100 sec.		18%	82%

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	**Then the cooking time must be...**
Higher power level	Decreased
Lower power level	Increased

Grilling

GB

The grill enables you to heat and brown food quickly, without using microwaves. To this aim, a grill rack is supplied with your microwave oven.

Always use oven gloves when touching the recipients in the oven, as they will be very hot.

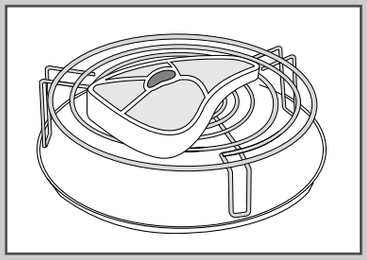

1 Preheat the grill to the required temperature, by turning the COOKING POWER CONTROL knob to GRILL symbol (⏦), and turning the TIMER knob to the appropriate time.

2 Open the door and place the food on the rack.

3 Turn the COOKING POWER CONTROL knob to GRILL symbol (⏦).

4 Turn the TIMER knob to the appropriate time.

Result: Grilling starts:

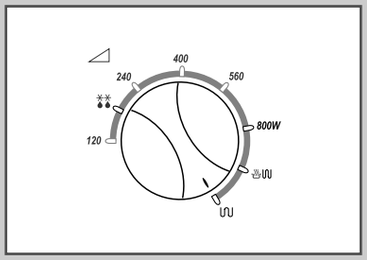

Please don't mind if heater turns off and on while grilling. This system is originally designed to prevent overheating of the oven.

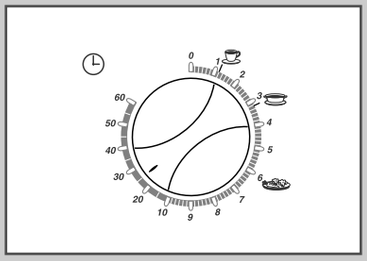

Cookware Guide

GB

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✔ ✘	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✔	Do not preheat for more than eight minutes.
China and earthenware	✔	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✔	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups and containers	✔	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✘	May catch fire.
• Recycled paper or metal trims	✘	May cause arcing.
Glassware		
• Oven-to-table ware	✔	Can be used, unless decorated with a metal trim.
• Fine glassware	✔	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✔	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✘	May cause arcing or fire.
• Freezer bag twist ties	✘	
Paper		
• Plates, cups, napkins and kitchen paper	✔	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✘	May cause arcing.
Plastic		
• Containers	✔	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✔	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✔ ✘	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✔	Can be used to retain moisture and prevent spattering.

GB

A Few Cooking Techniques

To ensure even cooking of the food in your microwave oven, lay the food out carefully using the following simple techniques. DO NOT forget to observe standing times.

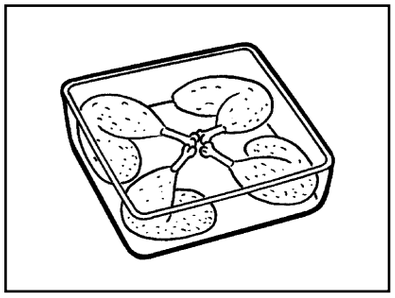

When cooking food with irregular forms, place the thinnest parts, which will cook faster, towards the centre of the dish.

Examples: Chicken legs, lamb cutlets, whole fish.

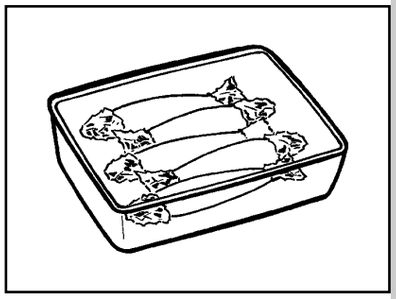

To prevent the thinnest parts of some food from becoming overcooked, cover the tips with small pieces of aluminium foil (keep away from the oven walls).

Examples: Heads and tails of whole fish, wings on a whole chicken.

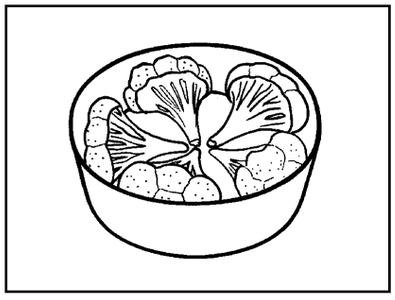

If you are cooking several pieces of the same type of food, try to have them of even sizes and place then in a ring around the dish.

Examples: Potatoes, cauliflower pieces, tomatoes.

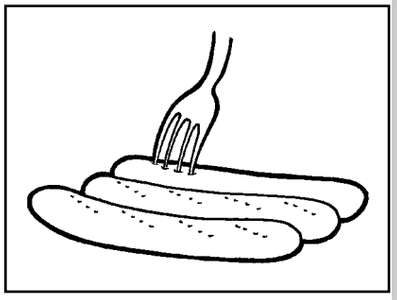

Food with skins must be pricked with a fork to allow the steam to escape and to prevent the skin from breaking.

Examples: Potatoes, tomatoes, sausages, egg yolks, whole fish.

Imperial/Metric Conversion Chart

OUNCES/FLUID OUNCES	*APPROXIMATE GRAMMES/MILLILITRES*
1	25
2	50
3	75
4 (1/4 lb)	100
5 (1/4 pint)	150
6	175
7	200
8 (1/2 lb)	225
9	250
10 (1/2 pint)	275
11	300
12 (3/4 lb)	350
13	375
14	400
15 (3/4 pint)	425
16 (1 lb)	450
17	475
18	500
19	550
20 (1 pint)	575

Reheating

Food		Cooking Time (Mins.)	Power Level	Comments
MAIN COURSES	Individual plates of food 1 plate 2 plates 4 plates	 2 - 3 3 - 4½ 6 - 8	MED-HIGH (70%)	• Cover the meat with gravy, with the meat and vegetables towards the outside of the plate. • Turn half way through heating. • Stack on a plate stacker.
	Cooked meats, chicken, chops, burgers, etc. 1 serving 2 servings	 1½ - 3 2½ - 4½	MED-HIGH (70%)	• Cover with cling film. • Re-arrange once during cooking.
	Stirrable casseroles 1 serving 2 servings 4-6 servings	 2 - 4 4 - 6 6 - 10	MED-HIGH (70%)	• Cover with cling film. • Stir well after 1 minute.
	Non-stirrable dishes (eg. LASAGNE) 1 serving 2 servings 4 servings	 5 - 8 9 - 12 12 - 16	 MED-LOW (30%) MED-LOW (30%) MEDIUM (50%)	• Cover with cling film. • Rotate dish at 2-minute intervals.
VEGETABLES	1 serving 2 servings 4 servings	1 - 1½ 1½ - 3 3½ - 6	HIGH (100%)	• Cover with cling film. • Stir well half way through cooking.
STARCHY FOODS	Pies 1 family pie, chilled 1 individual pie 2 individual pies mince pies 1 individual pie 4 individual pie	 7 - 10 2 3½ - 4 1/4 - 1/2 3/4 - 2½	 MED-HIGH (70%) HIGH (100%) HIGH (100%) HIGH (100%) HIGH (100%)	• If necessary, remove from foil tray. • Stand on and cover with absorbent kitchen paper.
	Pizza 1 whole individual pizza 1 slice of pizza	 3 - 4 1½ - 2	 MED-HIGH (70%) HIGH (100%)	---
	Rice 1 serving cooked 4 servings cooked Individual curry with rice	 2 - 3 8 - 10 3 - 5	 MED-HIGH (70%)	• Add a little stock, cream or butter to: - Add moisture - Prevent sticking
	Pasta 1 serving 4 servings	 3 - 4 10 - 12	 MED-HIGH (70%	• Add a little stock, cream or butter to: - Add moisture - Prevent sticking
CANNED FOODS	Convenience foods (baked beans, spaghetti), soups and rice pudding 7oz (200g) 15oz (425g)	 2 - 3 3 - 4	 HIGH (100%)	• Transfer to a suitable oven-proof dish. • Cover with cling film. • Stir well after 1 and 2 minutes.
PUDDINGS	Sponge pudding 1 serving 4 servings Christmas pudding 1 serving Whole (1lb-450g)	 1 - 1½ 2 - 3 ½ - 1 4 - 5	 HIGH (100%) HIGH (100%) MED-HIGH (70%)	• Cover with cling film. • Leave to stand for 2 to 3 minutes before serving, particularly if topped with jam. • Reheat carefully in an uncovered dish, as the high alcohol and sugar content could cause the pudding to burn if overheated.

Defrosting

GB

Food		Cooking Time (Mins. per lb/450g)	Standing Time (Mins.)	Comments
MEAT	Whole joints (beef, lamb, pork, etc.)	8 - 11	20 - 30	• Shield any thin or narrow ends with foil. • Turn twice during defrosting.
	Minced beef/lamb	7 - 9	10 - 15	• Break apart frequently. • Remove thawed pieces as soon as possible and leave to stand.
	Steak, chops, cutlets	6 - 9	10 - 15	• Turn half way through defrosting. • Shield ends and bones with foil, if necessary.
	Sausages, bacon	4 - 5	5	• Separate and re-arrange twice during defrosting.
	Cooked casseroles	15	5 mins. half way, 5 mins. at end	• Break up and set aside thawed pieces as they defrost.
	Cubed meat	7 - 8	10 - 15	
POULTRY	Whole chicken, duck, turkey, etc.	8 - 10	20 - 30	• Shield wings, breast bone, drumsticks with foil, as necessary. • Defrost breast side down first and turn half way through defrosting.
	Drumsticks, wings, thighs Small Large	 6 - 8 7 - 9	 10 - 15 10 - 15	• Arrange thinner ends towards the centre of the dish. • Turn and re-arrange twice during defrosting.
FISH	Whole fish (trout, mackerel)	4 - 5	5 - 10	• Shield thin ends with foil, if necessary. • Arrange in a single layer. • Turn once during defrosting.
	Fillets (plaice, kippers)	3 - 5	10 - 15	
	Steaks (cod, salmon)	4 - 5	10 - 15	
	Prawns, scallops	5 - 6 (per 8oz/225g)	5 - 10	• Stir half way through defrosting.
	Boil in bag fish	3 - 5	5	• Pierce the bag and place in an oven-proof dish. • Turn half way through defrosting.
FRUIT	Loose, soft fruit (raspberries, cherries, strawberries)	6 - 8	5 - 10	• Measure out required amount. • Stir once or re-arrange during defrosting and standing time.
	Loose, hard fruit (apples, peaches, rhubarb)	7 - 8	5 - 10	
	Purees, fruit dessert	7 - 10	10 - 15	• Stir carefully during defrosting.
	Fruit pie, trifles, cheesecakes with fruit toppings	3 - 4	10 - 15	• Stand on serving plate.
FLOUR PRODUCTS	Bread Large sliced/unsliced loaf	 5 - 7 / 6 - 8	 10 - 15	• Remove from plastic wrapping. • Stand on absorbent kitchen paper. • Turn over halfway through defrosting. • Over-defrosting will dehydrate the bread.
	Small sliced/unsliced loaf	3 - 5 / 4 - 6	10 - 15	
	1 slice	10 - 20 secs.	-	
	Bread rolls and croissants 1 2 4	 15 - 15 secs. 30 secs. 1 - 1 1/2	 1 - 2 1 - 2 1 - 2	
	Uncooked pastry	1 (per 8oz-225g)	20	• Remove from wrapping. • Stand on absorbent kitchen paper. • Turn frequently so that it does not get warm in places.
	Filled flans (7-8 in/18-20 cm)	4 - 5	5 - 10	• Stand on kitchen paper on the serving plate. • Remove paper before serving.
	Sausage rolls (4)	2 - 3	5	• Wrap each roll in kitchen paper to absorb moisture. • The standing time is essential.
	Sponge cakes Whole Individual	 1 - 1 1/2 40 - 60 secs.	 5 - 10	• Stand on kitchen paper.

Cooking Meat

Food		Cooking Time (Mins. per lb/450g)	Power Level	Comments
BEEF	Small roasts (fillet) Rare Medium Well done	 6 6 - 8 8 - 9	 HIGH (100%) for first 3 min. then MEDIUM (50%)	 • Turn over half way through cooking. • Stand for 15 - 25 minutes.
	Thick roasts (rib, rump, top side) Rare Medium Well done	 10 - 12 13 14 - 15	 HIGH (100%) for first 5 min. then MEDIUM (50%)	 • Shield bone and outer edge with foil. • Turn over half way through cooking. • Stand for 15 - 25 minutes.
	Brisket and pot roasts (well done)	20	HIGH (100%) for first 5 min. then DEFROST (30%)	• Cook covered. • Stand for 20 minutes.
	Steak (225g) Rare Well done	 3 5	MED-HIGH (70%)	---
LAMB	Tender cuts (leg, fillet, crown) Medium Well done	 10 - 12 12 - 14	HIGH (100%) for first 5 min. then MEDIUM (50%)	• Turn over half way through cooking. • Stand for 15 - 25 minutes.
	Tougher cuts (shoulder, boned breast) Well done	15		
	Chops, cutlets Well done	8 - 10	MED-HIGH (70%)	• Arrange the thin ends towards the centre of the dish. • Stand for 5 minutes.
PORK	Leg, shoulder Well done	10 - 12	HIGH (100%) for first 5 min. then MEDIUM (50%)	• Turn over half way through cooking. • Stand for 15 - 25 minutes.
	Chops Well done	8 - 10	MED-HIGH (70%)	• Arrange the thin ends towards the centre of the dish. • Stand for 5 minutes.
VEAL	Leg, shoulder, loin, rack Well done	15	HIGH (100%) for first 5 min. then MEDIUM (50%)	• Turn over half way through cooking. • Stand for 15 - 20 minutes.
GAMMON	Joints (well done)	10 - 12	MEDIUM (50%)	• Turn over half way through cooking. • Stand for 15 - 20 minutes.
	Steaks (well done)	6 - 8	MED-HIGH (70%)	• Turn over half way through cooking. • Stand for 5 minutes.
	Bacon 1 slice 2 slices 4 slices	 3/4 - 1 1/4 1 1/2 - 2 1/4 2 3/4 - 4	HIGH (100%)	• Loosely cover with kitchen paper.

Cooking Fresh Vegetables

GB

Food		Quantityl	Cooking Time (Mins. at HIGH)	Comments
POTATOES	Whole jacket potatoes	1 2 4	4 - 5 6 - 8 12 - 14	• Wash well and prick all over with a fork. • When almost cooked, wrap in foil and leave to stand for 5 minutes.
	Pealed potatoes cut into 1 inch (3 cm) cubes	3	6 - 7	• Place in a large oven-proof dish and cover tightly. • Stir well half way through the cooking time. • If mashing, add 1 - 2 minutes to the cooking time.
BEANS, PEAS, etc.	French beans	1lb (450g)	6 - 8	• Add 2 fl. oz (30ml) of water. • Taste after the minimum cooking time. • Serve immediately.
	Sliced runner beans	1lb (450g)	5 - 6	
	Broad beans	8oz (225g)	4 - 5	
	Peas	8oz (225g)	4 - 6	
	Mange-tout	12oz (375g)	6 - 7	
CABBAGE, CAULIFLOWER, etc.	Cabbage (roughly chopped)	1/2 medium	5 - 7	• Add 4 fl. oz (60ml) of water.
	Brussel sprouts	1lb (450g) 8oz (225g)	8 - 10 5 - 7	
	Cauliflower, divided into flowerets	1 whole	10	• Add 4 fl. oz (60ml) of water. • Arrange the flowerets with the stalks towards the centre of the dish.
	Broccoli	1lb (450g) 8oz (225g)	7 - 8 4 - 5	
	Spinach	1lb (450g)	5 - 6	• Cook tender leaves only with very little water. • Cover lightly.
	Spring greens	1lb (450g)	7 - 8	
ROOT VEGETABLES	Carrots (thinly sliced)	1lb (450g) 8oz (225g)	10 6 - 7	• Add 4 fl. oz (60ml) of water.
	Beetroot (unpeeled)	4 medium	12 - 15	
	Swede and turnip	1lb (450g)	10 - 12	• Add 4 fl. oz (60ml) of water. • Cover tightly. • Stir half way through cooking.
	Parsnips (quartered)	1lb (450g)		• Wrap in cling film or cook in a covered dish.
OTHER VEGETABLES	Mushrooms	8oz (225g)	2 - 3	• Cook in a covered dish with melted butter. • Do not overcook.
	Onions Whole Quartered	 2 large 4 - 5	 4 - 6 2 - 3	• Blanch in a covered dish with no additional water.
	Tomatoes	2	2 - 3	• Halve crosswise. • Dot with butter or grated cheese. • Cook in an uncovered dish.
	Courgettes	8oz (225g)	3 - 4	• Cook in a little water until just soft.
	Celery stalks (halved)	4 stalks	2 - 3	• Add 2 fl. oz (30ml) of water.
	Corn on the cob	1 2 4	2 - 3 3 - 4 6 - 8	• Wrap individually in cling film or place in a shallow oven-proof dish. • Turn twice during cooking.
	Asparagus	1lb (450g)	5 - 6	• Add 4 fl. oz (60ml) of water.
	Artichokes	1	4 - 5	• Wrap individually in cling film.
	Pumpkin in 1 inch (3 cm) cubes	8oz (225g)	6 - 7	• Place in a large oven-proof dish and cover tightly. • Stir well half way through cooking. • If mashing, add 1 - 2 minutes to the cooking time.

Cooking Frozen Vegetables

Food		Quantityl	Cooking Time (Mins. at HIGH)	Comments
POTATOES	Potato slices (1/2 inch/1cm thick)	1 2	4 - 5 6 - 8	• Oven chips are unsuitable for microwave cooking.
BEANS, PEAS, etc.	French beans	1lb (450g)	8 - 10	• Add 2 fl. oz (30ml) of water. • Place in a shallow oven-proof dish and cover.
	Broad beans	12oz (375g)	7 - 8	
	Peas	4oz (125g) 8oz (225g) 1lb (450g)	2 - 3 4 - 5 8	• Add 2 fl. oz (30ml) of water.
	Mange-tout	8oz (225g)	4 - 5	
	Mixed vegetables	4oz (125g) 8oz (225g)	3 - 4 4 - 6	
CABBAGE, CAULIFLOWER, etc.	Cabbage	8oz (225g)	3 - 4	• Add 3 fl. oz (45ml) of water.
	Brussel sprouts	8oz (225g)	4 - 5	• Add 2 fl. oz (30ml) of water. • Taste after the minimum cooking time to avoid overcooking.
	Cauliflower	8oz (225g)	5 - 6	• Add 2 fl. oz (30ml) of water. • Rearrange half way through cooking. • Leave to stand for 1 - 2 minutes and salt to taste.
	Broccoli	8oz (225g)	5	• Do not add any water.
	Spinach	8oz (225g)	4 - 5	---
ROOT VEGETABLES	Carrots	8oz (225g)	4 - 6	• Add 2 fl. oz (30ml) of water.
OTHER VEGETABLES	Corn on the cob	1 3 - 4	2 - 3 8 - 10	• Add a knob of butter.
	Sweet corn	8oz (225g)	3 - 4	• Add 2 fl. oz (30ml) of water.

Cleaning Your Microwave Oven

GB

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- ***Inside and outside surfaces***
- ***Door and door seals***
- ***Glass plate and roller ring***

ALWAYS ensure that the door seals are clean and the door closes properly.

1	Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2	Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3	To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the glass plate and heat for ten minutes at maximum power.
4	Wash the dishwasher-safe plate whenever necessary.

Clean the microwave oven cavity right often each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

Recommendations

DO NOT spill water in the vents.

NEVER use any abrasive products or chemical solvents.

Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

Storing and Repairing Your Microwave Oven

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- ***Broken hinge***
- ***Deteriorated seals***
- ***Distorted or bent oven casing***

Only a qualified microwave service technician should perform repairs.

NEVER remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

Storing the Oven

If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason: Dust and damp may adversely affect the working parts in the oven.

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Power source	230 V ~ 50 Hz
Power consumption	
Microwave	1200 W
Grill	1000 W
Combined mode	1350 W
Output power	800 W (IEC-705)
Operating frequency	2,450 MHz
Magnetron	OM75SH(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D)	
Outside	489 x 275 x 364 mm
Oven cavity	306 x 181 x 322 mm
Volume	0.6 cubic feet
Weight	
Net	15.5 kg approx.

Printed in UK